



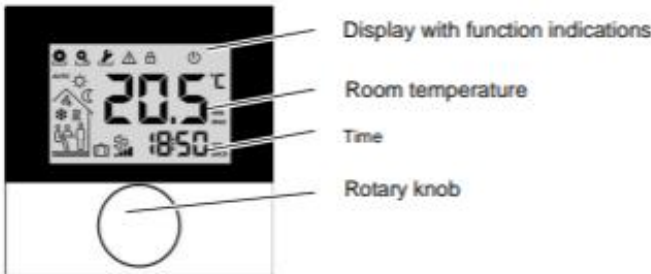

ComfortZone (Multizone Control) - Homeowner Guide

Multi-Zone control for the Joule ModulAir All-E & ModulAir All-E & GreenComfort Systems

Overview

The ComfortZone Heating controls allow control over two Independent Heating Zones (this is in addition to your zone for your hot water). The ComfortZone system features two wall mounted room thermostats in the apartment giving the user the ability to control both heating zones independently. The room thermostats are wired back to the ComfortZone Base station which communicates with the ModulAir System

Product Features

Power	ComfortZone Base Station - 230v-24v ComfortZone Room Thermostats - 24v
Technical Data	Room Temp Setting Range - 5 - 30°C Rating - IP20
Controller Overview	 <p>Display with function indications</p> <p>Room temperature</p> <p>Time</p> <p>Rotary knob</p>  <p>Turning sets the desired room temperature.</p>

Functions	<p>Programmers & Timers:</p> <p>Programmers & Timers should not be set on the room thermostats. The ModulAir System is designed to operate efficiently in manual mode. A comfortable desired room temperature should be selected. Frequent temperature adjustments should be avoided to ensure maximum efficiency and comfort. Desired room temperatures between 19-21 degrees are recommended.</p> <p>Operation:</p> <p>To raise the temperature in one of the zones in your apartment, twist the dial clockwise until the desired temperature is shown, then press the dial once. To lower the temperature, twist the dial anti-clockwise until the desired temperature is shown, then press the dial once. Once a suitable room temperature has been selected, the thermostat should be left to operate without interference from the user. Thermostats should not be turned off.</p>
Support	<p>Commissioning:</p> <p>The ComfortZone system has been setup and commissioned by your installer. Background settings should only be adjusted by a qualified and trained individual.</p> <p>Servicing & Maintenance:</p> <p>The ModulAir All-E system must be serviced annually. This is the responsibility of the consumer. The ComfortZone room thermostats should be checked on a service for correct operation and setup.</p> <p>Faults, Error codes & System Breakdown:</p> <p>In the event of a fault, error code display or system breakdown contact your installer or a trained operative to diagnose the issue. Further support can be found on the Joule website or by contacting Joule Technical Support for Homeowners.</p>

Relevant Resources

Setting the Time & Date:

https://www.youtube.com/watch?reload=9&v=WSq1hnr6-TY&embeds_referring_euri=https%3A%2F%2Fcustomerservice.jouleuk.co.uk%2F&source_ve_path=ODY1NzAsMjg2NjY&feature=emb_logo

Turning On the room thermostats:

<https://youtu.be/qsFHAFWJzA8>